


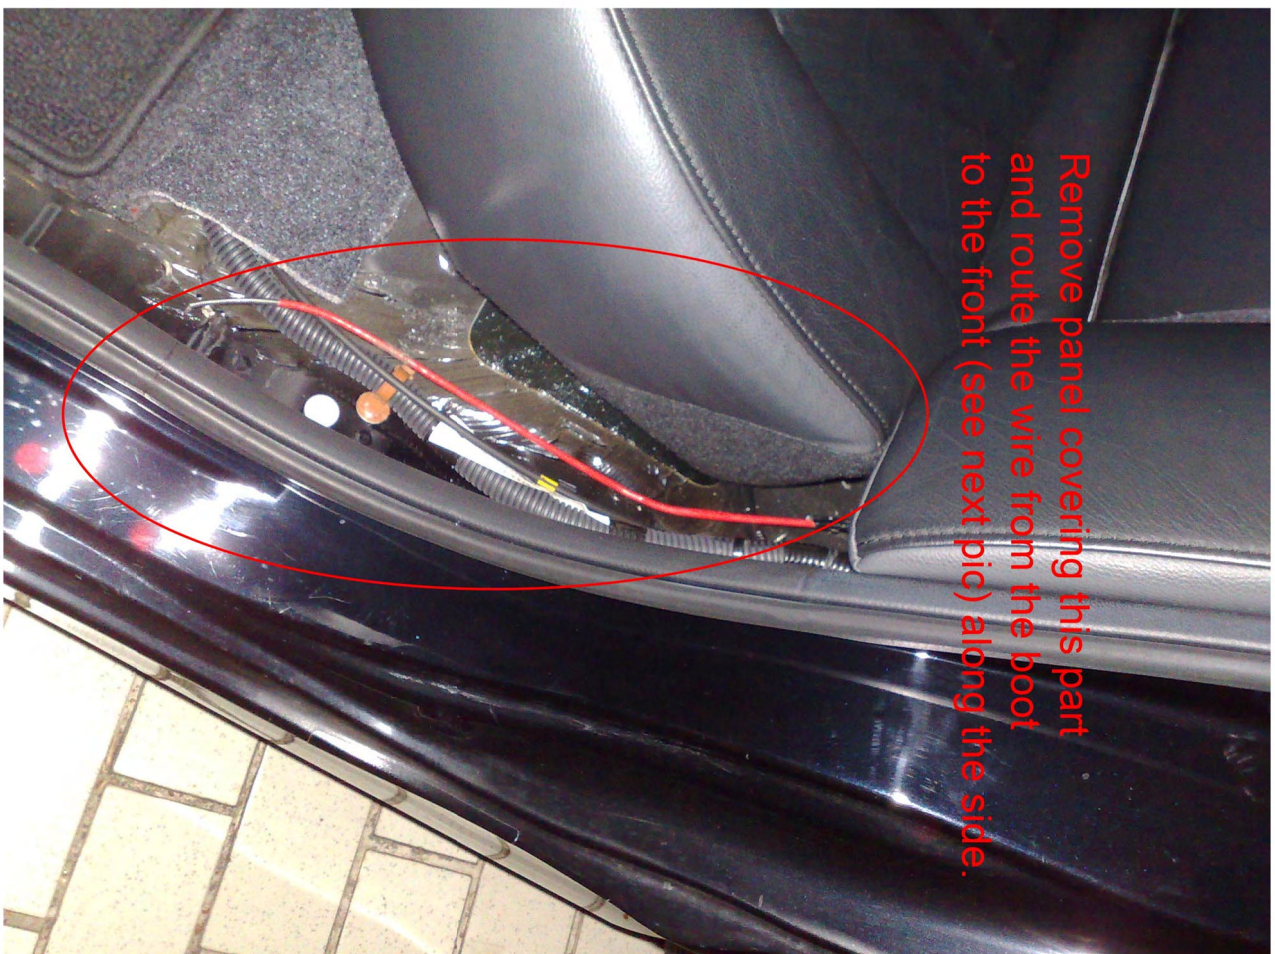


With a wire router or something similar, route a wire (AWG 22 or better) from this side to the side of the rear seat (left side)

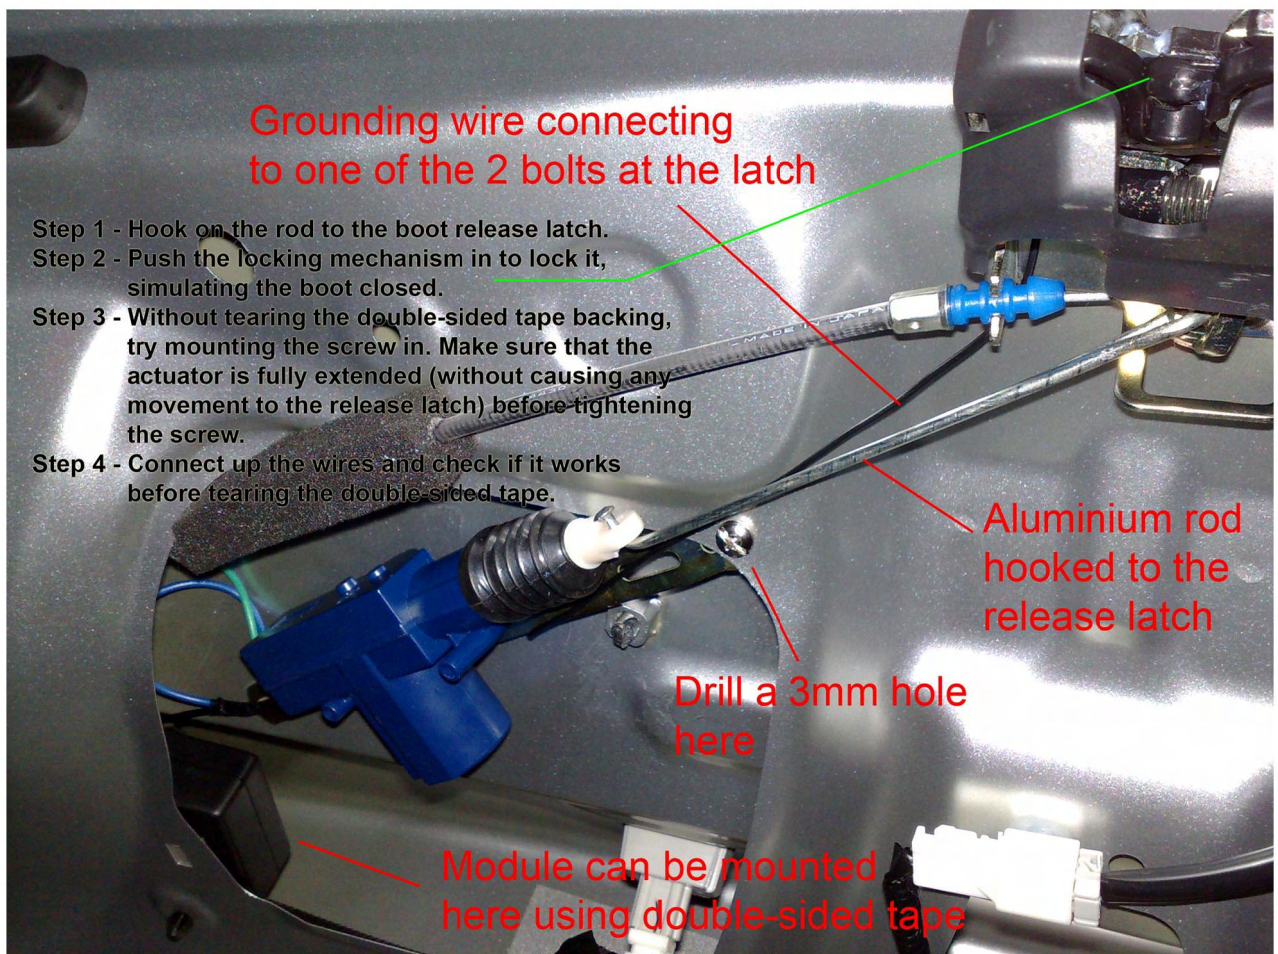

Remove panel covering this part and route the wire from the boot to the front (see next pic) along the side.

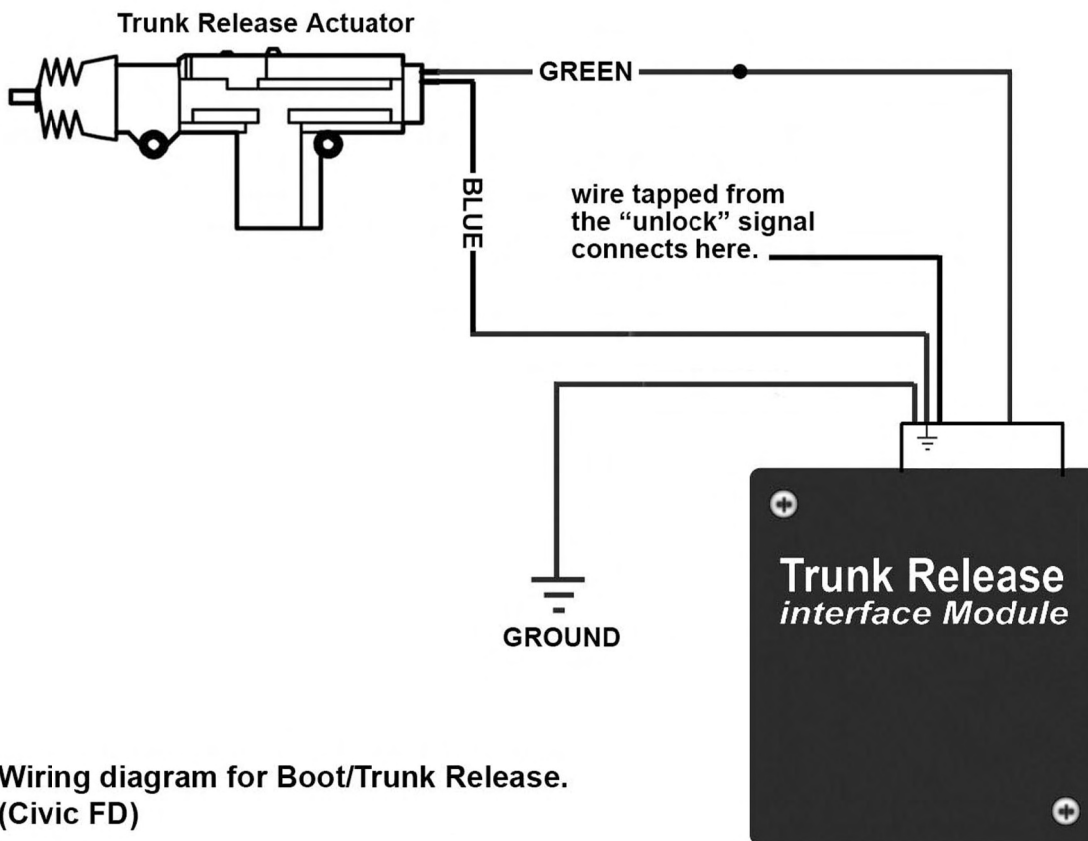

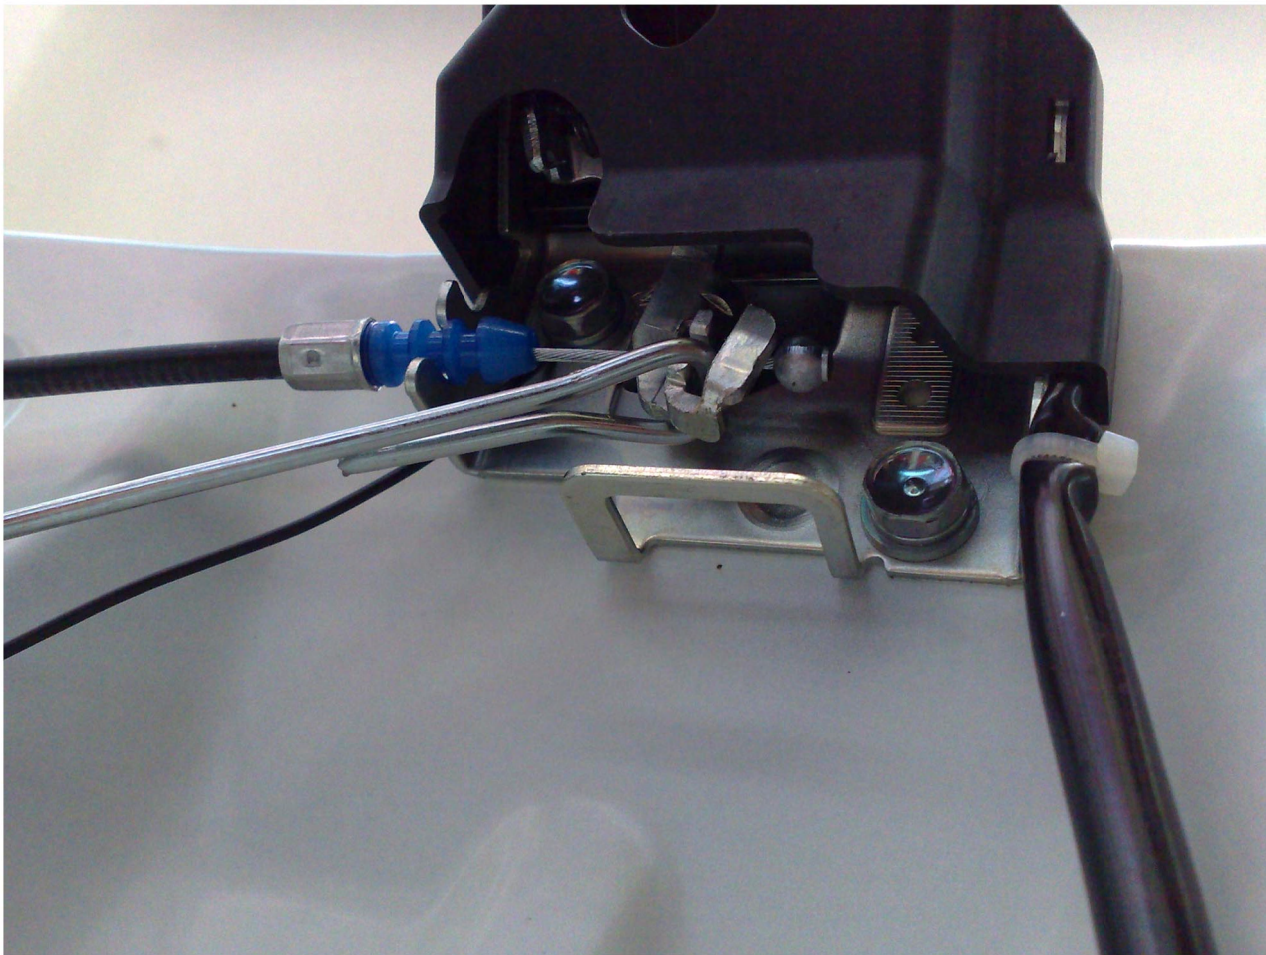

Wiring diagram for Boot/Trunk Release.
(Civic FD)